


NEW IN 2019

J.K.Medico battery chargers CCC4xxS now with build in data logger

Logged data are readable by a NFC card reader (Near Field Communication) by connecting the reader to a USB port of a PC.

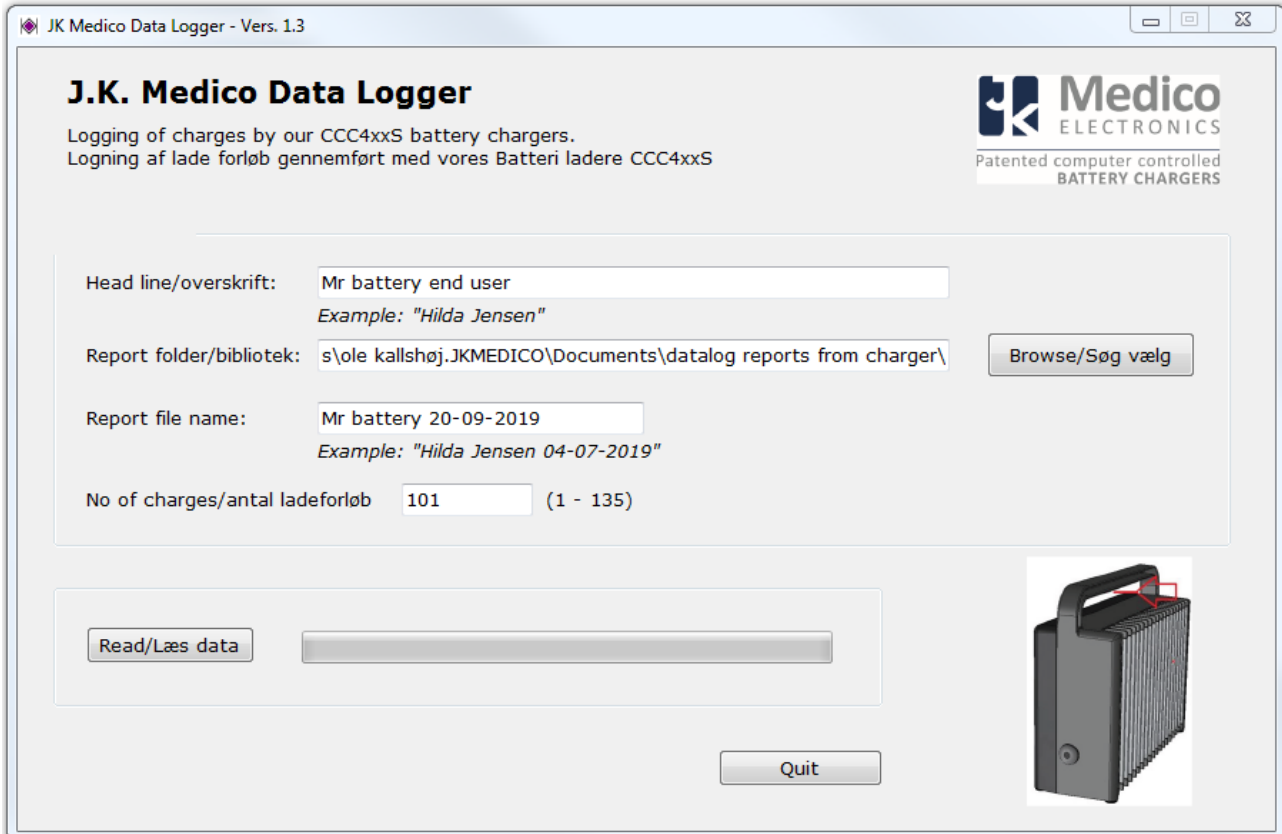


J.K. Medico Data Logger
Logging of charges by our CCC4xxS battery chargers.
Logning af lade forløb gennemført med vores Batteri ladere CCC4xxS

Head line/overskrift:
Example: "Hilda Jensen"

Report folder/bibliotek:

Report file name:
Example: "Hilda Jensen 04-07-2019"

No of charges/antal lade forløb (1 - 135)



- All data are automatically transferred direct into an Excel spreadsheet.
- The spreadsheet shows any charging errors or events having influence on the battery lifetime by a red color, which make it easy to use for insurance matters or failure searching.
- You get a very credible evidence of the way the batteries are handled.
- The report contains all specific information of the charger, such as: Type, S/N, production date, battery type program, programmed voltages and currents.
- During the charging, the following parameters are measured and logged: Battery Voltage and current, temperature, mains voltage, Ampere hours.
- The data logging program has predefined limits and will give a written status on all good or bad events and the bad ones will be colored red.

This option are available in all our chargers